


# Country Camper Doorway Measuring Guide


Caravans and Campers come in all shapes and sizes, each with unique features that are designed to make camping in Australia enjoyable and fun.

The variety of doorway designs are surprisingly varied and while we have a significant database of doorway measurements, we'll sometimes ask you to confirm dimensions or help us with a camper we've not previously seen.


Start by standing inside your camper and using a tape measure, check the width left to right and height using the diagrams below as a guide.

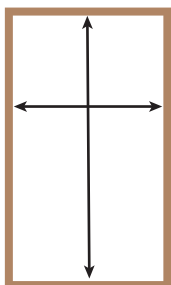


Rectangular

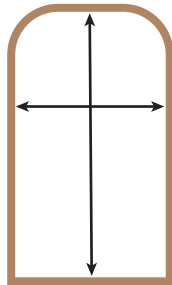

Squared

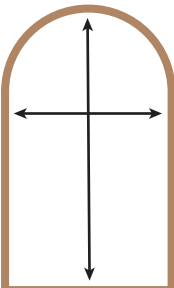

Arched

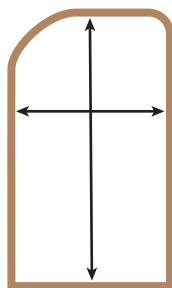

Chamfered

When measuring doorways, measure within the door frame (inside edges). We'll make allowances for the attachment at the top and to ensure the screen overlaps on the sides.

If the distance above the doorframe to the roof is less than 5cm, then let us know on the Notes when you order and we'll reduce the top attachment allowance.


Round the measurements up to the nearest cm, so for example 51.5cm becomes 52cm.

For Campers, pop up the roof and assemble the door frame, so you can take accurate dimensions.


If your camper door is Arched or Chamfered, measure to the highest point from the door frame bottom edge.

Slanted doorways are a feature on some A-Van campers. For these doorways, the process is a little more complicated since the slanted section needs to follow the roofline.

The process for Left and Right Slanting doors is the same and in the following description we've used the Slanted Right door for illustration.


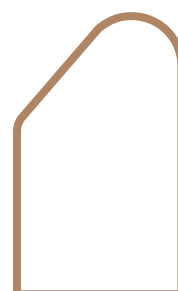


Slanted Left

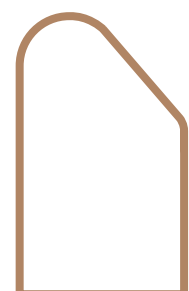



Slanted Right

Start by taking the measurements of the doorway width and height to the highest point on the doorframe.

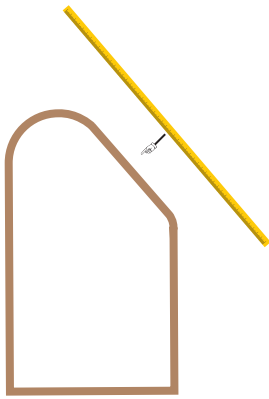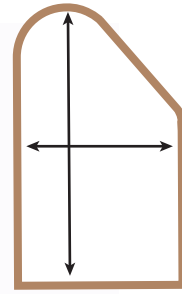


Using a straight-edge (a strip of timber will do), place it on the slanting edge and using a pencil mark the door frame where the lower curve of the frame starts.

Now measure from the pencil mark to the bottom of the door frame edge.

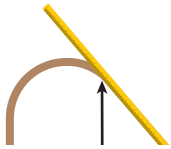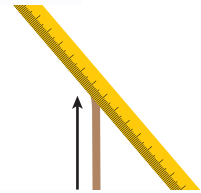

At the top, again mark where the curve of the doorway starts. Then measure from this mark to the bottom of the door frame and make a note of where the tape lands on the bottom frame edge (vertically).

Finally, from the mark you've now made on the bottom frame, measure to the right-hand edge (left-hand on the Left Slanted door).

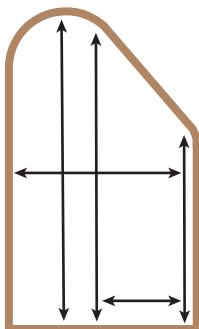

You should now have five measurements:

- Height to the highest point on the frame
- The width at the widest point
- The height to the start of the slant up
- The height to the end of the slant
- The width of the slant.

When ordering, put the first two measurements in the Height and Width fields, and the remaining three in the Notes section.